



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	64570	Cord	1
2	23229	Lower Housing	1
3	23233	Upper Housing Assy	1
4	23226	Drive Cap	1
5	22267	Hanger Bail	1
6	64945	Rear Motor Frame	1
7	23231	Front Motor Frame	1
8	22514	Speed Control/Light Assembly	1
9	21063	Insulator	1
10	27847	Carbon Brush/Shunt and Terminal	2
11	65806	Brush Spring	2
12	65805	Brush Retaining Clip	2
13	27198	Motor Frame Retainer Clip	2
14	22453	Field Assembly	1
15	21067	Rubber Bearing Cup, Small	1
16	21068	Rubber Bearing Cup, Large	1
17	15766	Screw	2
18	22086	Rear Housing Screw	2
19	27072	Armature Assy (includes #20)	1
20	27251	Metal Cam and Bearing Assy (USA)	1
21	S20651	Blade Drive Assembly	1
22	27863	Blade Hinge Screw	2
23	23232	LED Holder Screw	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
24	64535	Lock Keeper	1
25	64537	Blade Lock	1
26	64606	Housing Screw	2
27	S63897	Hinge Assembly	1
28	64991	Oil Seal	1
29	65828	Screw	2
30	17091	Hair Seal	2
31	23281	LED Pad	1
32	64003	Blade Bracket	1
33	64027	Blade Guide	1
34	64013	Tension Spring	1
35	64139	Blade Screw	2
36	23228	LED Holder	1
37			
38			
39			
40			
41			
42			
43			

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.